

Random Cycle Generator

Important Notice

INSTALLATION OR USE OF THE DOWNLOADED FILES INDICATES YOUR ACCEPTANCE OF [THIS AGREEMENT](#). IF YOU DO NOT AGREE WITH THE TERMS OF THIS AGREEMENT, DO NOT DOWNLOAD, INSTALL, OR USE ANY OF THE DOWNLOADED FILES.

DOWNLOADING THE SOFTWARE

The following packages are available:

- The latest version of the Random Cycle Generator, zipped executable (RCG_Stand_Alone.zip).
- The latest WLTP Random cycle generator, *with installer* (RCG_installer.zip). Note: administrator rights are needed to install this package.

Quick start

For the latest quick start see the section Download the software – you can download the [Quick start](#) at the same location. A HOWTO file ([RCG-GUI manual.pdf](#)) is also provided with the program files.

Installing the Software

Follow the instructions in this section to install the generator on your system.

To install the software with the installer (This requires administrator-rights on your system)

1. If you have Administrator rights, you can download the installer contained in the following ZIP file: [RCG_installer.zip](#)
2. After the download is completed, unzip the file and run the installer. -> The installer executable file has the .exe extension. Double-click the installer file *setup.exe* to run it.
3. Accept the default installation directory for the Random cycle generator or specify another directory with the Browse button.->. Click Next.
4. Click Next to begin the installation.
5. Click close to finish the installation.

Note: The installation directory must be empty and the user profile you are using to run the installer must have read/write permissions for this directory.

Install the software without the installer

1. If you DO NOT have administrator rights, you should use the following (stand-alone) executable, packed in the following zip file: [RCG Stand Alone.zip](#)
2. After the download completes, unzip the file on the destination location.
Note: The directory must be empty and the user profile you are using to run the installer must have read/write permissions for this directory.
3. Run Random_Cycle_Generator.exe to start the application.

Using the Software

A simple HOWTO is provided in:

[RCG-GUI manual.pdf](#)